

STAEBELL & ASSOCIATES
903 N. Bowser Road, STE 370
Richardson, Texas 75081
(214) 341-7885

email humidors2@gmail.com

INSTRUCTIONS-ARISTOCRAT CABINET HUMIDOR- **THC-0.75 cleartop 530v5**

The drawer has a “push-pull” closure that is fairly tight for shipping. To open the drawer, simply pull. Slides will then operate freely to full extension.

**Allow the cooling system to operate for 6-8 hours before adding water to the system
The remote recirculating fans are set to operate for 1 minute each 20 minutes.**

The low humidity alarm may beep after 4 hours until water is put in the humidifiers. Simply unplug the unit & plug it back in to reset the alarm.

ALLOW 3-5 DAYS CONDITIONING PERIOD BEFORE ADDING YOUR CIGARS.

The humidifier will run much more frequently as the wood absorbs moisture on it’s way to a stable RH. That frequency of release of higher moisture air may be absorbed by your cigars during the break in period if placed in the cabinet too soon. After 2-3 days the unit will operate on a normal cycle. **Do not** wipe down the inside with water to speed the process up.

HUMIDIFICATION

The system is comprised of 4 basic components. S&F Digital Controller, Reservoir, Cooling units & power supply. Power is supplied with the std plug/cord in the rear.

The Reservoir has a two-wire connector that attaches to the Controller cable in the bottom of the humidor–Note the small lever on the side of the connector, which must be depressed to disconnect this cable from either the reservoir or the controller. **Place the condensate drain tube in the second hole of the humidifier.**

To fill the reservoir a small blue plug is removed. Use the funnel provided and beaker to fill reservoir with 600 ml of distilled water (1 beakers full) . **Note the slots in the side of the reservoir. DO NOT OVERFILL**-Water may damage the electronics or your cabinet. Use only **DISTILLED WATER**. There is a water media wick that should be replaced once every 3 months to a year. We recommend that the wick be periodically checked for growth of mold or bacteria. Replacement wicks are available from Staebell&Associates.

OPERATION OF DIGITAL “SET & FORGET”

We do not recommend that you precondition by wiping down the humidor. The risk of wood warping is usually due to rapid changes in moisture. Allow the humidification system to bring the humidor up to the desired RH.

Position the Reservoir/fan in the rear of the cabinet, with the fan located under the open space of the shelf to allow an upward airflow. Caution must be used to avoid tilting or tipping the reservoir when positioning.

STAEBELL & ASSOCIATES
903 N. Bowser Road, STE 370
Richardson, Texas 75081
(214) 341-7885


email humidors2@gmail.com

The Controller has been preset to maintain 65% humidity. Temperature preset for 68 degrees. The system will turn on when the RH drops below 63% & temp above 70 degrees. The display will alternate between temperature following the upside down F symbol (ie 070) & RH (following the "h" symbol-- ie 65.4%).

Changing the Temperature & RH Set Points

Temperature Setting

Press left Arrow key to SP1

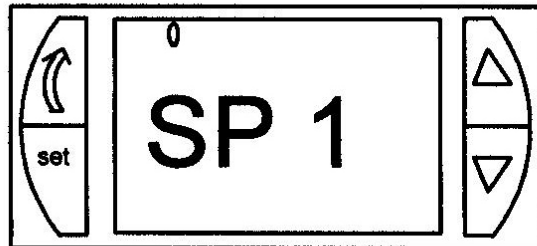


Press SET to display curr setting

Up or Down arrows to change
Press SET to lock in the new
setting


NON TEMP Control Cabinets
should be set at 100

Temp Control are set at 68 deg

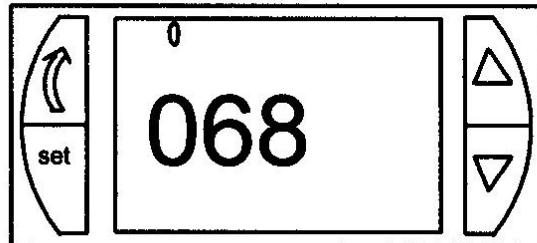


Humidity Setting

Press left Arrow key to SP2

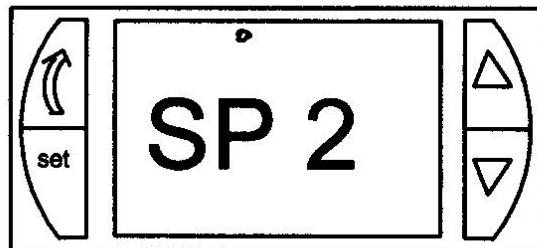

Press SET to display curr setting

Up or Down arrows to change
Press SET to lock in the new
setting

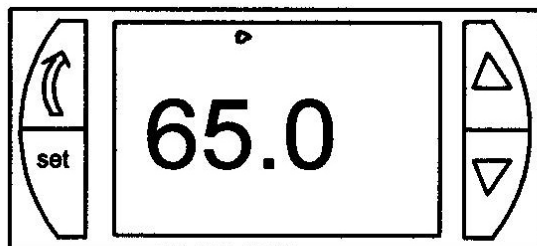


email humidors2@gmail.com

Changing the temperature or RH display offset

Calibration Offset Temp & RH


Press left Arrow key to "func"

Press SET to display F01
Press Set again to display 0

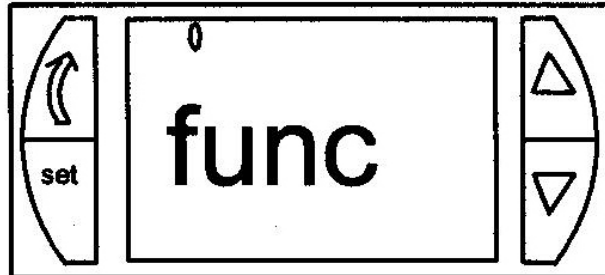

Up or Down arrows to
access code 123


Press SET to return to F01
Down Key to F40 for temp
offset

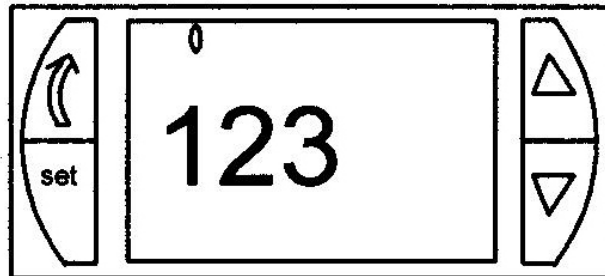

Down key to F41 for RH
offset


Down Key For F41 RH Offset

Down Key for F40 Temp
Offset

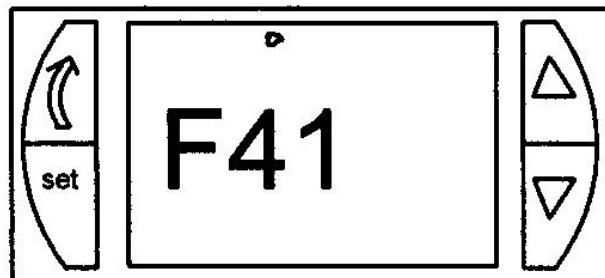

Press SET to display curr
offset

Up or Down arrows to
change
Press & HOLD SET to lock
in the new setting until a
dashed line appears

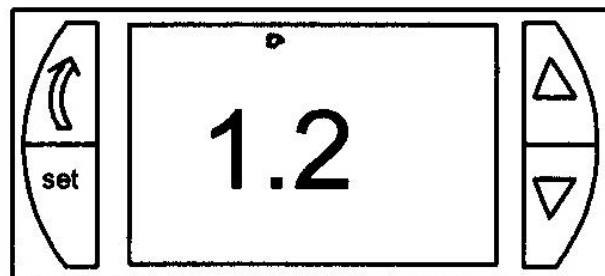

STAEBELL & ASSOCIATES
903 N. Bowser Road, STE 370
Richardson, Texas 75081
(214) 341-7885

email humidors2@gmail.com

The humidification is warranted for 2 years from date of purchase. Staebell & Associates warranties include the humidor & electronics, but does not include damage or loss to the contents of the humidor.

Please do not hesitate to call me if you have questions.

Bob Staebell

Additional notes

- 1) Allow the humidor to stabilize at 65% for several days(3-5) before placing cigars in the humidor. Take particular care to avoid directly over the air flow from the reservoir as the air coming out of the fan is 80%+ RH. After the cabinet is stabilized the unit will run less frequently & provide an overall stable environment
- 2) The 65% initial set point has been selected because the ambient temp is often in the mid 70's & upper 80's during the summer months. For many peoples' preference, this would dictate a lower RH to keep the absolute RH the same. If after the cabinet is stabilized, you find your cigars are a little dry, simply raise the RH setpoint up a couple of % until your cigars have the desired feel.
- 5) Additional wicks for the reservoir are available from Staebell & Associates.
Cost is \$9.00 ea or 6pk/\$45.00

STAEBELL & ASSOCIATES
903 N. Bowser Road, STE 370
Richardson, Texas 75081
(214) 341-7885

email humidors2@gmail.com

NOTE: High Humidity areas

Naturally high humidity environment- ie next to ocean, lakes, and areas like southern Florida or Louisiana often have very high humidity. Allow the system to cool down before adding water to the humidifier.

You may find at certain times of the year, that the ambient humidity when cooled to 65-68 degrees, already has enough water to be at 65-70% without using the humidifier.

Even if one does not add water, make certain the humidifier has the drain tube inserted to collect condensate, should a fan go out & the fins condense out water..